



PORT REPLICATOR  
VEGA RP-1

User Manual



### Document Information

Title	Port Replicator Vega RP-1
Document Type	Manual - Translation from Russian
Document Number	B-01RP1-01
Revision and date	01 – 15.10.2020

This document complies to the next devices:

Series Name	Device Name
VEGA RP	Vega RP-1
VEGA MT	Vega MT-22
	Vega MT -23
	Vega MT -24
	Vega MT-25
VEGA MT X	Vega MT X Int
	Vega MT X Ext
	Vega MT X LTE

### Revision History

Revision	Date	Name	Comments
01	15.10.2020	KEV	Document release date

# CONTENT

\_Toc54084413

INTRODUCTION.....	4
1 DESCRIPTION AND OPERATION .....	5
2 SPECIFICATION .....	5
3 OPERATION BEGINNING.....	6
<b>Contacts description</b> .....	6
<b>Device indication</b> .....	7
<b>Connection to the monitoring device</b> .....	7
<b>Inputs/OUTPUTS</b> .....	8
<b>Actuators</b> .....	10
4 STORAGE AND TRANSPORTATION REQUIREMENTS .....	11
5 CONTENT OF THE PACKAGE .....	12
6 WARRANTY.....	13

## INTRODUCTION

This manual is designated for Vega RP-1 port replicator (hereinafter – the device) manufactured by Vega-Absolute OOO and provides information on powering procedure, and functions of the device.

This manual is targeted at specialists which familiar with installation and repairing procedures rules for motor transport and had holding of professional knowledges in the field of electronic and electrical equipment of different vehicles.

Vega-Absolute OOO reserves the right to make changes to the manual related to the improvement of equipment and software, as well as to eliminate typos and inaccuracies, without prior notice.

## 1 DESCRIPTION AND OPERATION

Vega RP-1 port replicator is designed for connecting to the monitoring devices of the Vega MT series for extending the number of device outputs and inputs.

RP-1 may be connected through RS-232 or RS-485 interface and has 4 open drain outputs and 6 multifunctional inputs.

You can set up the inputs and outputs of the RP-1 through the “Configurator” application. In this case, you should connect to the monitoring device that is supposed to be expanded.

## 2 SPECIFICATION

Parameter	Value
Housing dimensions, mm	66x35x16
Ingress protection rating	IP53
Operating temperatures, °C	– 40...+85
External power, V	9...36
Active mode consumption, mA	up to 15
Sleep mode consumption, mA	up to 5
RS-232	1
RS-485	1
Digital outputs	4
Multifunctional inputs	6

### 3 OPERATION BEGINNING




#### CONTACTS DESCRIPTION



Contact	Wire color	Description
1 / 13	No / Red	Power +
2 / 14	Black	Ground
3 / 15	Violet / Orange	RS-232 Tx / RS-232 Rx
4 / 16	Pink + Black / Pink + Blue	RS-485 A / RS-485 B
5 / 17	<i>Green + Yellow / Yellow + White</i>	<i>Reserve (UART TX/RX)</i>
6 / 7 / 18 / 19	Blue / Yellow / Green / Gray	Digital outputs
8 / 9 / 10 / 20 / 21 / 22	White + Green / White + Black / White + Yellow / White + Blue / White + Red / White + Brown	Multifunctional inputs
11 / 12 / 23 / 24	<i>No</i>	<i>Does not used</i>

## DEVICE INDICATION

The device has one red LED indicators which shows the external power status.

LED signal	Meaning
 Always red	External power connected
 Red flashes	Data exchanging through one of the interfaces
 Short red flashes	Sleep mode (the transition between the "Sleep" and "Active" modes occurs synchronously with the monitoring device)

## CONNECTION TO THE MONITORING DEVICE

RP-1 connection is carried out via RS-232 or RS-485 interfaces, depending on the model of the monitoring device, to which the port replicator is intended. In this case, the monitoring device must already be connected and configured (see "User manual" for your device). To connect RP-1 to the device, do the following:

1. Connect the connector with wires to the RP-1.
2. Connect another end of the connector to the monitoring device.
3. Connect an external power with voltage of 9...36 V (board net) to the RP-1. After power connection the red LED will must become glowing.
4. Run the Configurator application on the PC, press "Connect" button and choose the connection method like "Connect through TCP".
5. Choose your device in the list.

6. On the left menu choose "Settings", "Inputs/Outputs" tab.
7. Choose the connection type for your device in the line "Input/output extension unit" - "Connected to": RS-232 or RS-485.

## INPUTS/OUTPUTS

The "Inputs / Outputs" tab allows you to configure RP-1 inputs and outputs in a specific way.

Server connection	Data transmission	Track	Power saving	Security	Geofencing	Inputs/outputs	Scenarios	iQFreeze	BT/BLE settings
▶ Multifunctional input 1									
▶ Multifunctional input 2									
▶ Multifunctional input 3									
▶ Frequency output 1									
▶ Fuel level sensor 1									
▶ Fuel level sensor 2									
▶ Fuel level sensor 3									
▶ Fuel level sensor 4									
▶ Dallas temperature sensors									
▶ Ignition									
▶ Accelerometer movement sensor									
▶ GPS movement sensor									
▶ Alarm button									
▶ Authorization sensor									
▶ Machinery hours sensor									
▶ Camera									
▼ Input/output extension unit									
Connected to									RS-485 ▼
▼ External multifunctional input 1									
Input type:									Digital ▼
Active level:									Low ▼
▼ External multifunctional input 2									
Input type:									Pulse ▼
Active level:									High ▼
▶ External multifunctional input 3									
▶ External multifunctional input 4									
▶ External multifunctional input 5									
▶ External multifunctional input 6									

Multifunctional input - has the settings "Input Type": Digital, Frequency, Pulse, Analog, - and "Active Level": Low / High.



In **analog** mode, the input voltage is measured. Such an input can be used for sensors whose readings vary in a certain range.

In **digital** mode, the input signal level (0 or 1) is measured. Such an input can be used for logic sensors, the readings of which are determined by two states (on/off).

In the **frequency** mode, the frequency of the pulse signal is measured. Such an input, for example, is convenient to use for a car tachometer.

In **pulse** mode, the number of pulses at the input is counted. Such an input can be used for flow rate sensors, for example, fuel consumption.

In the settings of multifunctional inputs in the “Configurator” application, in addition to selecting a mode for each input, there is a parameter called “Active Level”. It can take the value “low” and “high” and characterizes the magnitude and direction of the input tightening.

Input type	Low active level	High active level
Analog	Pull-down to the ground 22 kOhm	Pull-down to the ground 22 kOhm
Digital	Pull-up to external power 44 kOhm	Pull-down to the ground 22 kOhm
Pulse	Pull-up to external power 44 kOhm	Pull-down to the ground 22 kOhm
Frequency	Pull-up to external power 44 kOhm	Pull-down to the ground 22 kOhm


## ACTUATORS

Actuators are connected to the device via digital outputs 1...4, which are of the type "Open drain".



Permissible load on each digital output 0.5 A

To increase the load on the outputs of the device, you must use an external relay. The relay connection diagram is shown below.

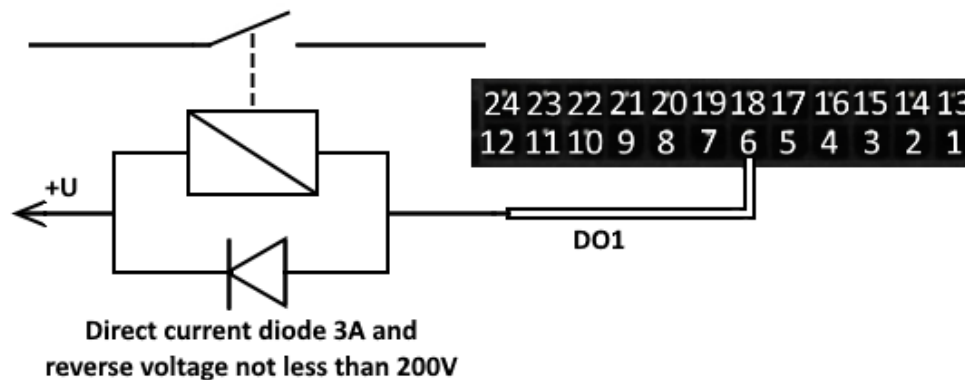

## 4 STORAGE AND TRANSPORTATION REQUIREMENTS

Port replicators shall be stored in the original packaging in heated room at temperatures +5°C to +40°C and relative humidity less than 85%.

The device shall be transported in covered freight compartments of all types at any distance at temperatures -40°C to +85°C. After transporting the devices at low temperatures, it is recommended to hold them at room temperature for 24 hours before starting operation.

## 5 CONTENT OF THE PACKAGE

The port replicator comes with the following items.

Port replicator Vega RP-1 – 1 pc.

Wire connector – 1 pc.

Factory certificate – 1 pc.

## 6 WARRANTY

The warranty period for the port replicator is 36 months from the date of sale.

The manufacturer is obligated to provide repair services or replace the failed device during 36 months from the date of sale.

The consumer is obliged to comply with the conditions and rules of transportation, storage and operation specified in this user manual.

Warranty does not apply to:

- the device with mechanical, electrical and/or other damages and defects caused by violation of the transportation, storage and operation requirements;
- incomplete devices;
- the device with traces of repair performed not by the manufacturer's service center;
- the device with traces of oxidation or other signs of liquids leaking inside the device.

In the event of a warranty claim, contact the service center:

113/1, Kirova Str., Novosibirsk, 630008, Russia.

Tel.: +7 (383) 206-41-35.



[vega-absolute.ru](http://vega-absolute.ru)

User Manual © ООО Vega-Absolute, 2019-2020